


BROSELEY

Installation & Operating Instructions
For Gas Q5 Stoves

IGNITE 5 GAS STOVE - (CD1)
HEREFORD 5 GAS STOVE - (CD2)
DESIRE 5 GAS STOVE - (SD1)

Remote or Manual Control
Conventional, Top or Rear Flue, Natural Gas Stove

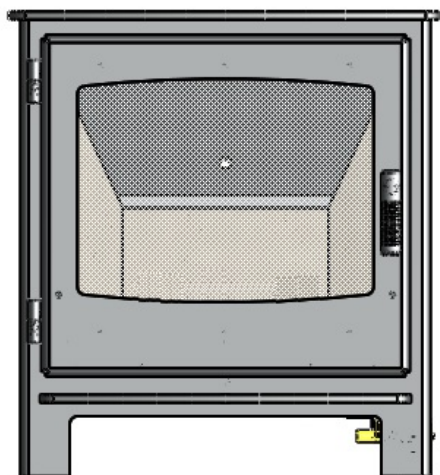

PLEASE LEAVE THESE INSTRUCTIONS WITH THE END USER

Please note: Gas installations MUST only be carried out by installers who are Gas Safe registered.

Warning - Appliance should not be used if the glass in the door is cracked, damaged or broken.

Contents

Introduction	3
Packing List	3
Specification	4
Dimensions	4
Hearth Requirements	5
Chimney Requirements	6
Assembly	
Burner Installation	7
Mica Board Installation	8
Fitting the Decorative Log Retainer	9
Connecting the TTB Sensor	9
Ceramics Index	10-12
Positioning the logs	13-20
Gas Connection & Pressure Testing	21
Spillage Testing	22
Maintenance	23
Operating the Stove Manual Control Version	24
Operating the Stove Remote Control Version with Display	25-34
Cleaning the Stove / Curing the Paint	35
Trouble-shooting	36-37
Servicing	38
Commissioning Form	39
Guarantee	40

Introduction

THANK YOU FOR PURCHASING A BROSELEY GAS STOVE

Broseley Fires Ltd, a family run company, was founded as an appliance and design development company in 1975.

Since then we have built up an enviable reputation for the quality, reliability and fuel efficiency of our stoves.

These instructions have been carefully prepared to guide the installer and end-user through the relevant methods and standards for installation of your new Gas Stove.

Correctly installed and operated, your stove will give you many years of warmth and reliability. Therefore, we would suggest that you read the whole instruction manual prior to handing it to your installer. That way you will have a clearer picture of what is involved.

It is required by law that the complete assembly, installation and commissioning of gas stoves is carried out by a professionally qualified and accredited gas fitter listed on the “**Gas Safe**” register.

THE INSTALLATION MUST BE IN ACCORDANCE WITH THE ‘GAS SAFETY INSTALLATION AND USE REGULATIONS’ IN CONJUNCTION WITH THESE INSTRUCTIONS AND THE RELEVANT ‘BRITISH STANDARDS CODES OF PRACTICE’ REQUIREMENTS AND THE RELEVANT ‘LOCAL AND NATIONAL BUILDING REGULATIONS’. A COMMISSIONING CERTIFICATE MUST BE LEFT WITH THE END CUSTOMER UPON FINAL COMPLETION AND THE COMMISSIONING FORM COMPLETED IN THE BACK OF THESE INSTRUCTIONS.

Packing List

Stove Box

1 x Stove Body
1 x Flue Spigot
1 x Burner (Attached)
1 x Instruction Manual
1 x Left hand side mica board (Attached)
1 x Right hand side mica board (Attached)
1 x Rear mica board (Attached)
1 x Top mica board (Attached)
1 x Flue blanking plate (Attached)
3 x M6 x 30 bolts
3 x M6 Washers
3 x M6 C/Sunk Screws
1 x Metal Fuel Bed
1 X Base Plate

Fibre Box (Packed outside Stove)

2 x Front Rail Parts
14 x Various Logs
5 x Pine Cones

Remote Control Version only

1x Remote Handset and batteries

Chimney closure plates are not supplied


Specification

Heat Input (Gross)	6.4kW
Gas Category	I _{2H}
Supply Pressure	20 mbar
Gas Rate	0.66 m ³ /hr
Injector Size	7 x 0.73mm (Q5)
Flue diameter	125mm (5")
Country of destination	GB, IE
Efficiency Class	Class 2
Nominal Output	4.6kW
NOx Class	3

Please note this product is designed to only use natural gas G20.

Dimensions

Ignite CD1 Q5 - WEIGHT 61 Kg
Hereford CD2 Q5 – WEIGHT 56 Kg
Desire SD1 Q5 – WEIGHT 58 Kg

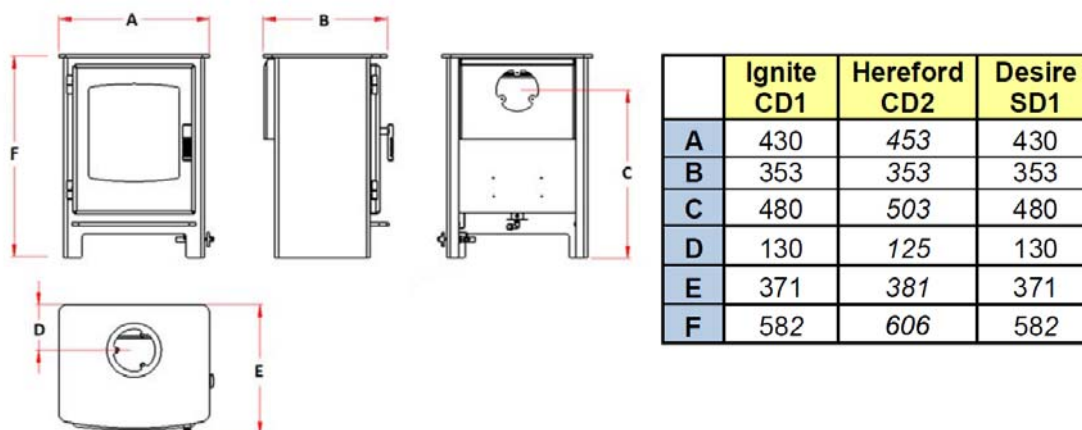

All dimensions are in millimetres.


All parts of this appliance become hot during normal use. All parts of the appliance should be considered 'working surfaces'.

Hearth Requirements

The appliance needs to be located onto a solid non-combustible hearth with a minimum thickness of 12mm. The hearth must be capable of withstanding the weight of the appliance.

**NB Side measurements taken from the Lid of the stove (Dimension E on page 4):
Rear measurement taken from the dilution box**

Ensure all minimum clearances to combustible materials are complied with as below:

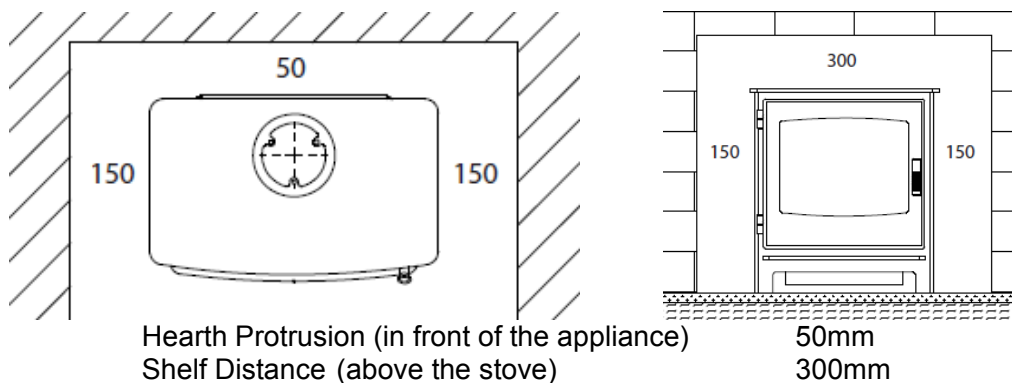

The specified minimum clearances provide the minimum distance to combustible and non-combustible materials. If the appliance is intended to be installed into a non-combustible opening, the clearances to the sides and above can be reduced. However it is recommended that the specific minimum clearances are maintained, irrespective of the materials used in the construction of the opening. This has been tested and approved, to allow adequate air flow and access to the controls, as well as allowing access for smoke tests and future maintenance of the flue and the appliance.

The clearance to the rear of the appliance must always be a minimum of 50mm. Clearances to combustible materials cannot be reduced

Please note the gas supply connection to the appliance is to the right hand side rear of the stove. The connection requires an 8mm-diameter semi-rigid pipe, not more than 1 meter in length.

Additional Requirements

- Curtains should not be positioned above the appliance at a distance of less than the minimum specified for shelves
- An additional guard is to be used to take account of the special hazards that exist in nurseries and other places where there are young children or aged or infirm persons present.

Chimney Requirements

Please note Broseley Fires do not provide flue pipes, closure plates or any other associated accessory.

Top or Rear Flue Outlet

The stove must be installed in accordance with current gas and buildings regulations BS5871: Part1. The appliance can be installed in any adequate area suitable for solid fuel fires and stoves. It can use a class 1, class 2 and pre-cast flue.

For pre-cast flue installations it is ESSENTIAL that a sealed connection is made into the actual flue system (a void behind a closure plate is not permitted). Please refer to the codes of best practice for further advice on pre-cast flues. Before you install the stove, make sure the chimney flue outlet is correctly positioned to align with the flue outlet on the stove and that the chimney is in good condition. If not, a chimney liner must be installed or a suitable class II gas flue used. A draught is necessary to ensure the products of combustion are fully evacuated.

It is recommended that the flue run is as straight as possible. The flue must have a minimum vertical height of 3 metres to ensure adequate draught. You can have a maximum of four bends in the run, each bend must not exceed 45° and an additional metre of vertical flue should be provided for each bend. Ideally you should have a minimum vertical section of 600mm before any bend immediately off the top of the appliance, however it is permitted to use a 45° bend straight off the appliance provided you have an adequate flue draft.

Prior to installation, the installer should ensure that the flue is free from obstruction and any dampers must be fixed in a permanently open position. Ensure the chimney is not closed and that it has been swept and subsequently smoke tested.

Make sure that rain, birds or any foreign body cannot get into the chimney to cause damage or blockage. This problem can normally be overcome by fitting an approved gas cowl. It is essential for the effective running of your stove that the chimney draws properly to allow the products of combustion to escape.

VENTILATION (GB ONLY)

The gas stove is rated at less than 7kw and therefore does not normally require additional ventilation in the room (BS5871 – part II).


Flue Spigot Connection

Attach the supplied 5" diameter spigot to the top or rear of the stove using the three M6x40 bolts and washers provided. The blanking plate (supplied) must be fitted over the remaining flue outlet using 3 off m6 Countersunk screws.


Assembly - Burner Installation

The burner will come pre-fitted, however please ensure all components are present and fitted as per the information below prior to commencing installation. You will need a pozi drive screwdriver when fitting/replacing these items.

- 1) Remove the stove body from its packaging and stand it in position.
- 2) To open the door, remove the handle by rotating it anti-clockwise until it clears the thread. The handle acts like a nut on a thread and once removed will allow the door to open fully.
- 3) Insert the burner end with the control knob first followed by the other end of the burner locating the burner bracket onto the side fixing points.
- 4) Fasten the burner into position using two (2) M6x40 bolts and washers provided, the burner needs to be pushed back to the rear of the stove. The front edge of the burner brackets should be flush with the front edge of the brackets on the stove body.

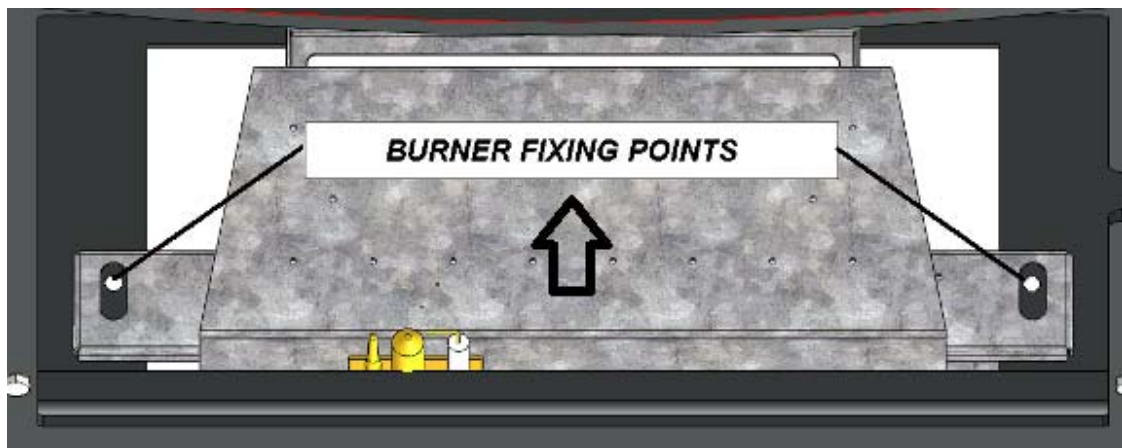


- 5) The stove base plate can now be fitted. This plate rests on the base on the stove

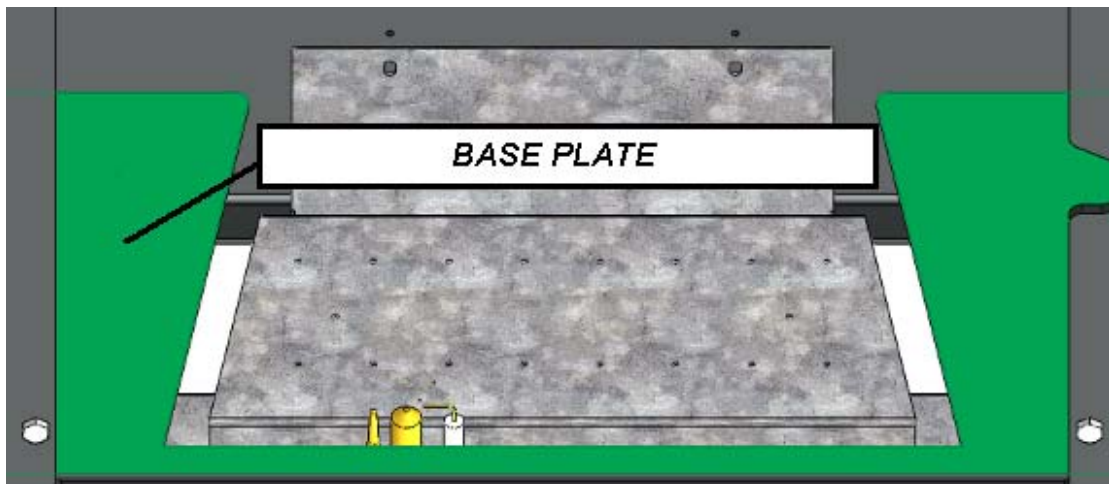


- 6) Next fit the mica boards as detailed in the next section.


Assembly - Mica Boards

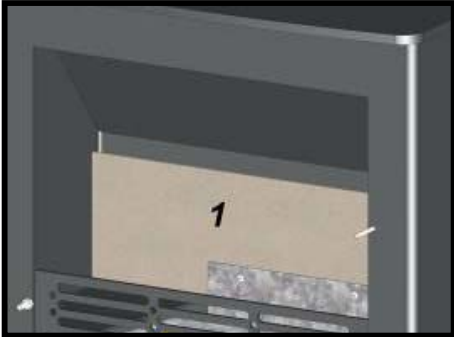

First fit the rear mica board as shown above.

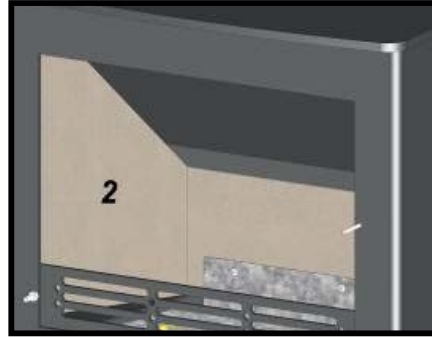

Now fit one of the side mica boards ensuring that the board is snug between the front of the stove and the rear mica

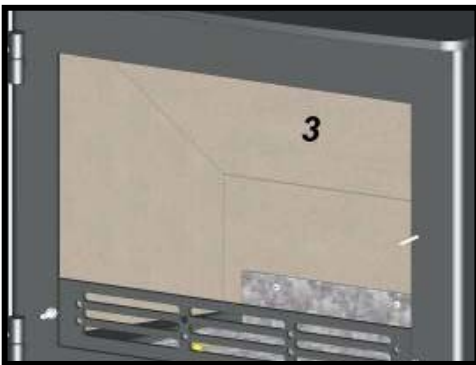

Next rest the top mica board onto the side board (this board will need supporting whilst the final side board is fitted).




Finally fit the reaming side mica board and allow the top board to rest down onto it (the top board should now be supported by both the side and rear mica boards)

Please note you will also need to remove the pilot shield from the pilot before fitting the ceramics (this protects the pilot during transit).


Assembly – Decorative Log Retainer

Using the 2 off M5 C/Sunk Bolts provided, locate the decorative trim behind the stove opening as shown and secure in position.

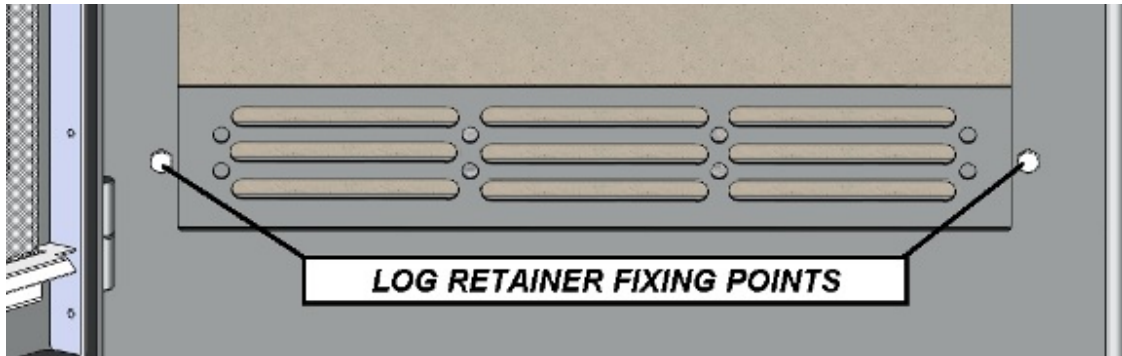

Assembly - Fitting TTB sensor

With the burner installed, thread the TTB connection cable from the interrupter to the TTB sensor (mounted on the rear panel of the stove).

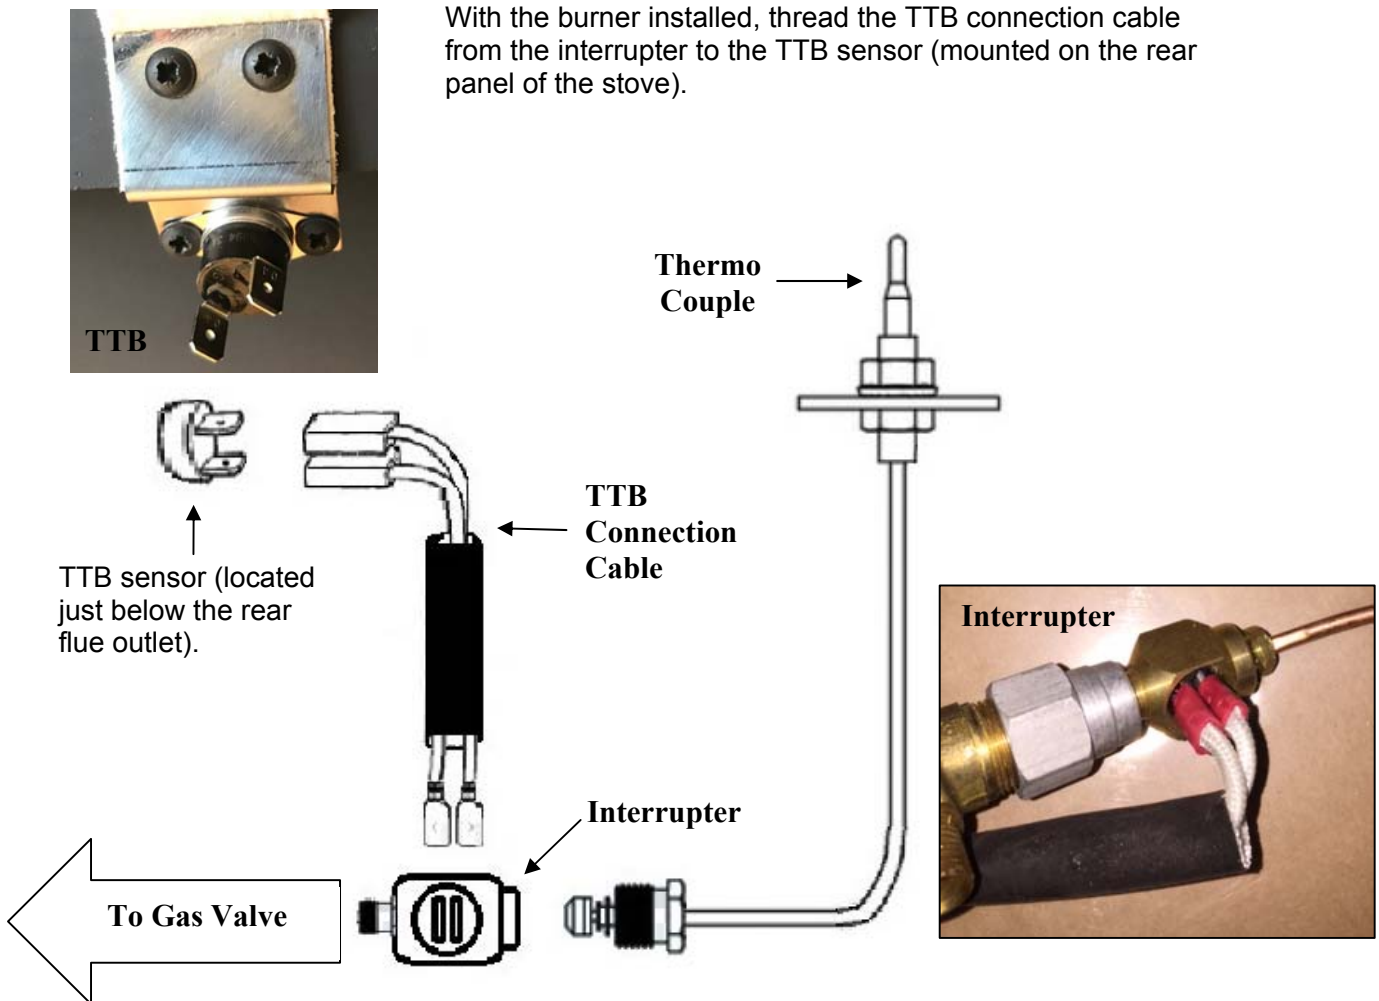

Assembly - Positioning the Logs


Only the ceramics supplied with this appliance should be used. The ceramics should only be laid as described in these instructions.

Before any ceramics are placed in position, ensure that the pilot is not obstructed, and the burner is operating correctly.

Broseley Fires Ltd accepts no responsibility for any injury sustained whilst handling hot ceramics. Ceramics which are placed other than in accordance with these instructions will be the sole responsibility of the fitter to rectify, and Broseley Fires will not be liable for any associated costs.


Before proceeding with the positioning of the logs, ensure they are all present. Leaving them in the packaging will allow you to locate them easier, using this guide. Not all the logs are stamped with a letter, so, please use the photos above to identify them.

Ceramic Index 1 of 3

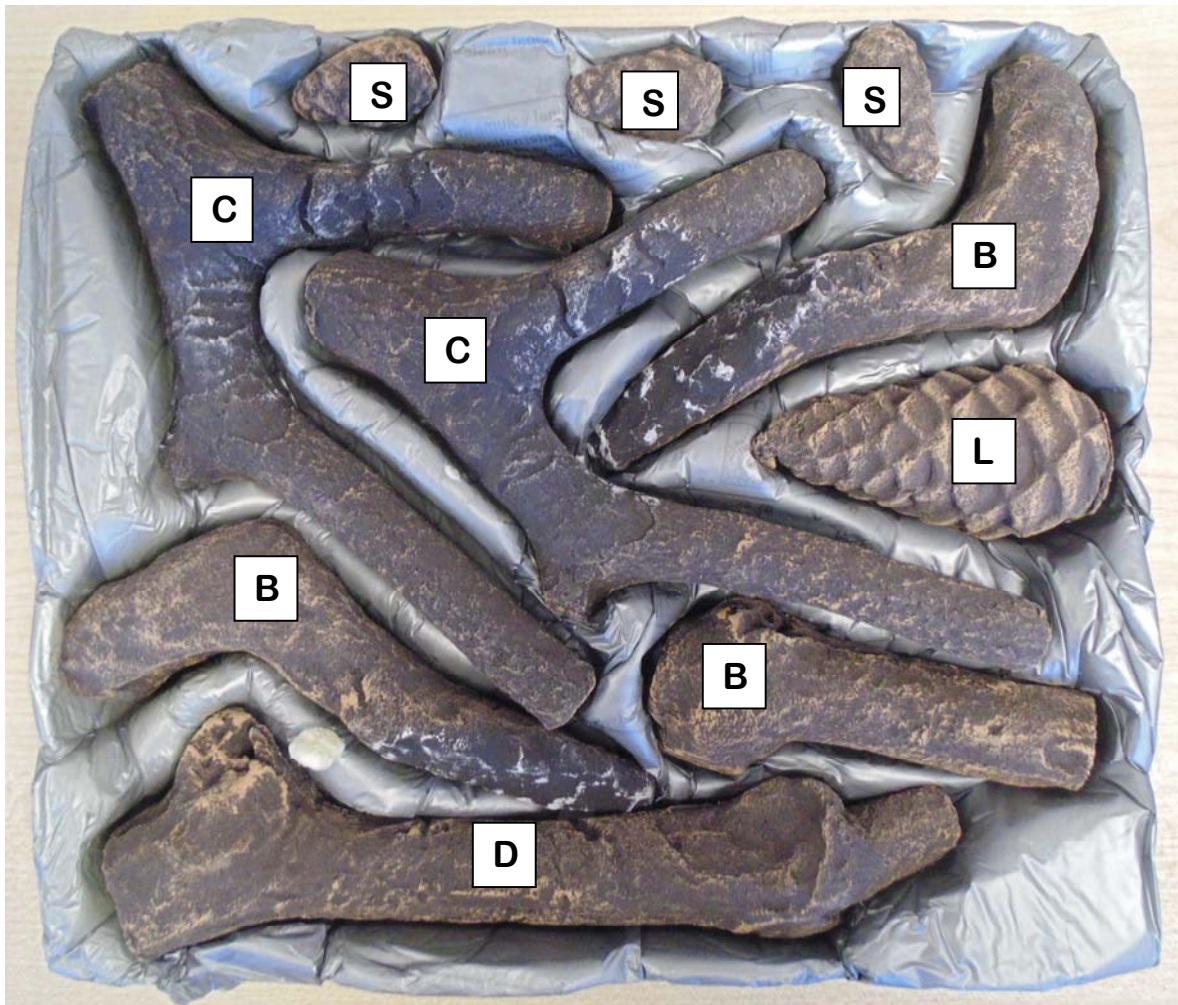


Assembly - Positioning the Logs

Ceramic Index 2 of 3

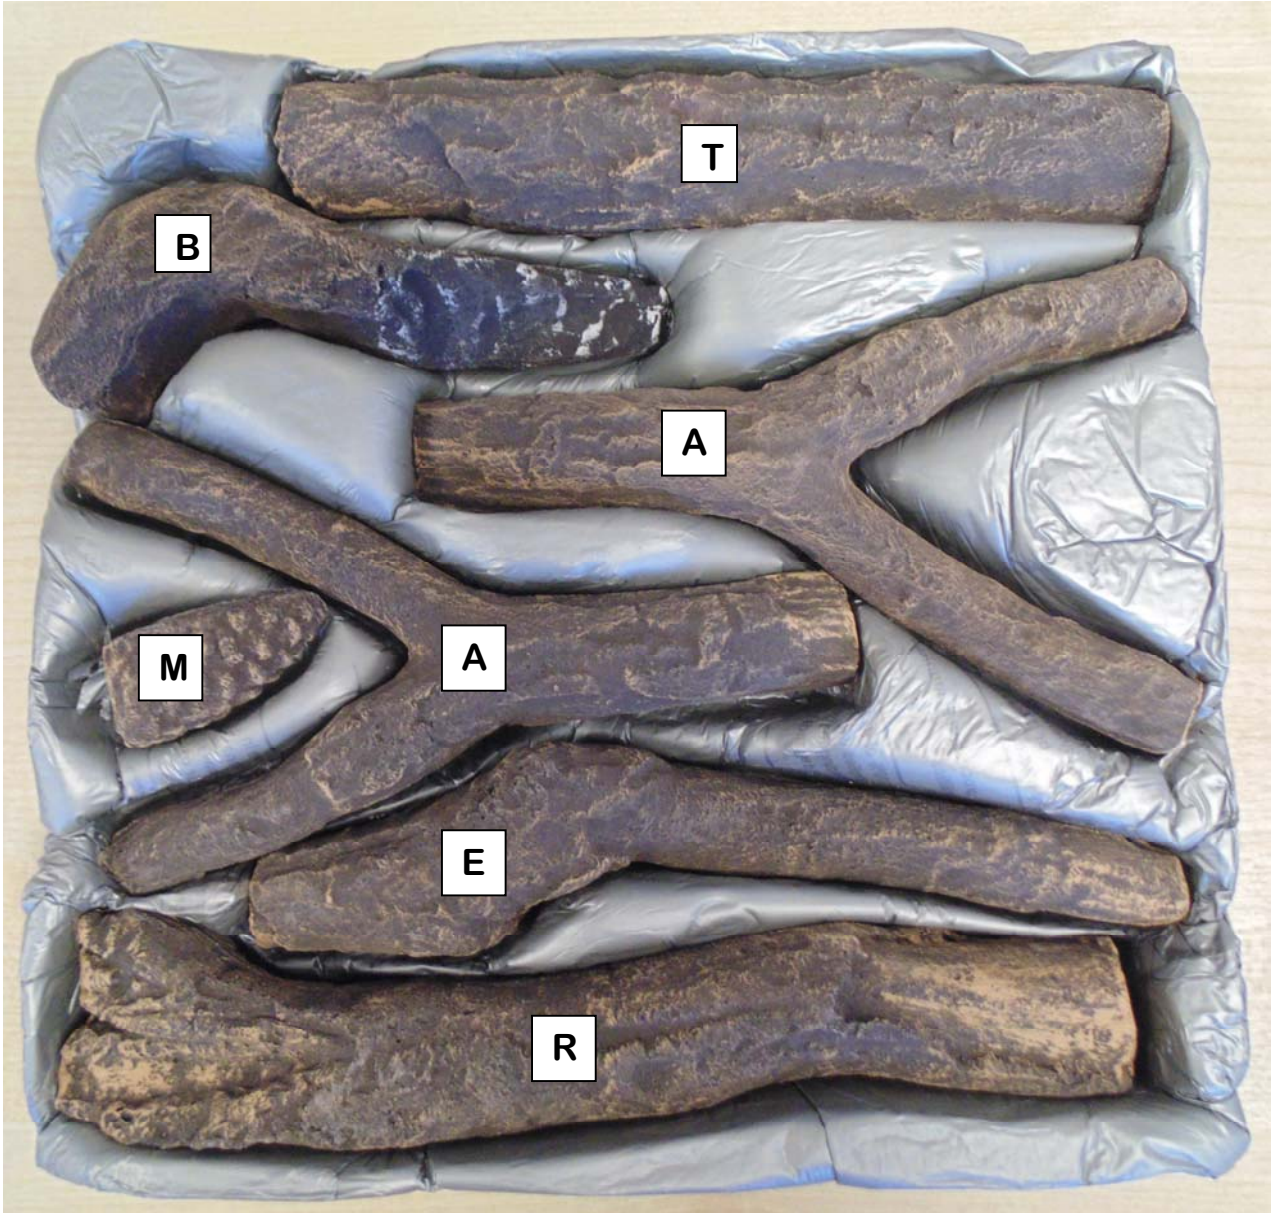

Assembly - Positioning the Logs


Ceramic Index 3 of 3

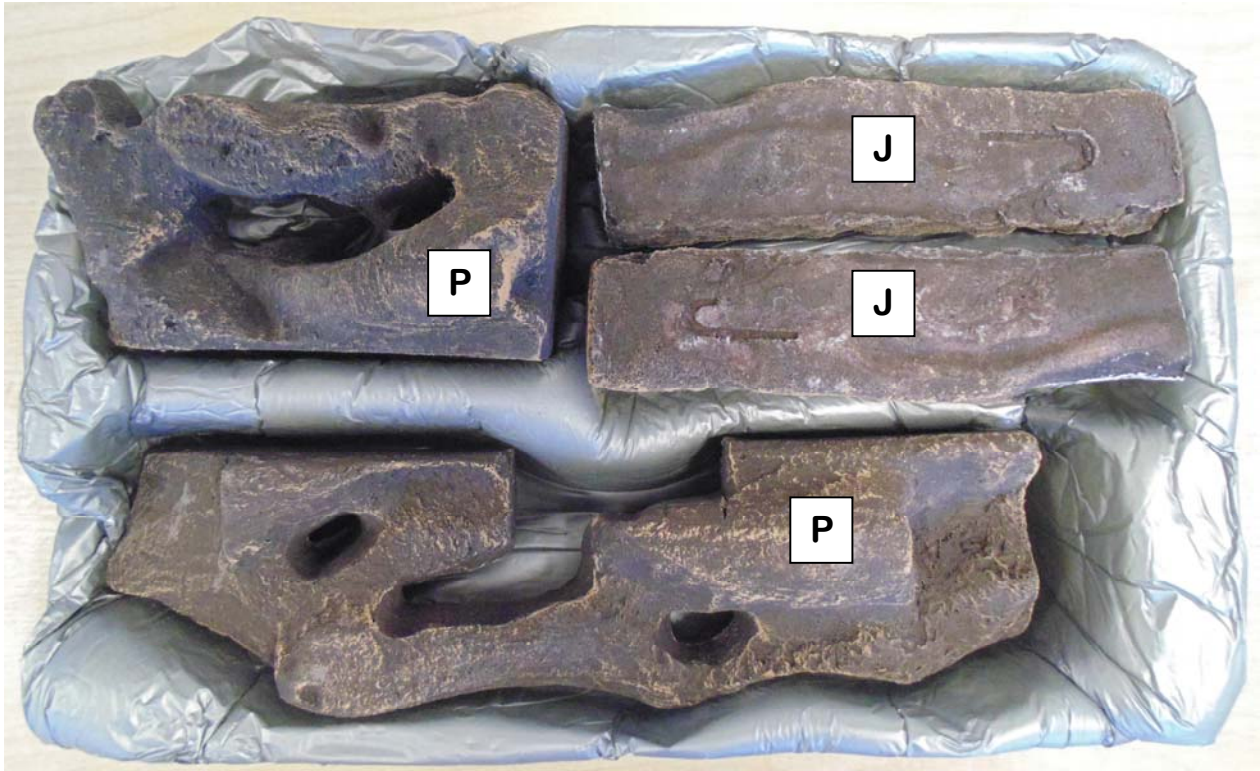

Before proceeding with the positioning of the logs, ensure they are all present. Leaving them in the packaging will allow you to locate them easier, using this guide. Not all the logs are stamped with a letter, so, please use the photos above to identify them.

Assembly - Positioning the Logs

STEP 1 - Place the metal fuel bed on top of the burner, slide backwards against the rear mica panel, ensuring that it is located centrally left and right. The cut-out for the pilot needs to be on the front left, as shown in the photo below.

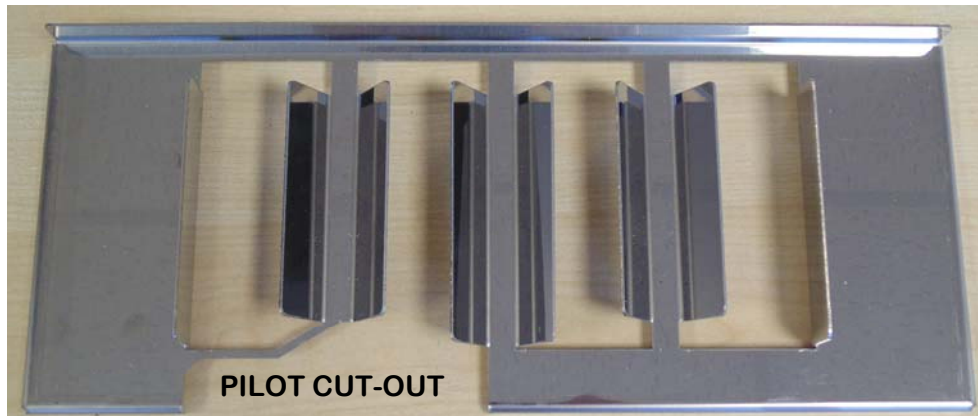

STEP 2 - Locate the front log matrixes (2off P) between the upstands on the decorative fret and the metal fuel bed. Ensure the ceramic is positioned as far left as possible (ensuring the pilot is in the centre of the cut-out).




Assembly - Positioning the Logs


STEP 3: Locate 2 off curved logs (B) and 2 Logs (J) as shown below. The curved logs (B) are to be arranged so that the left hand side log is pointing up at the rear, and the right hand side log is pointing downwards. Both (B) logs are against the side mica panels, and touch the rear mica board also.

The 2 off logs (J) are positioned centrally behind the angled flaps on the metal fuel bed. They are to be orientated so that the flat surface of the log, with the letter "J" impression in it, is facing up, and is level.

Please note 2 off logs (J) will appear to be upside down, but this is correct.

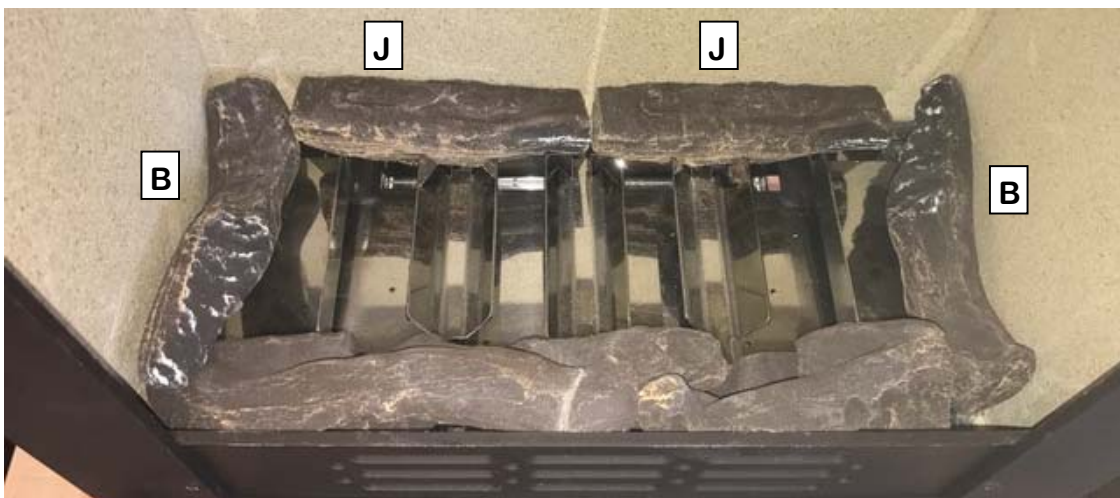


STEP 4 - Place straight log (B) centrally on the metal fuel bed, with the thin end pointing backwards, resting against the front of logs (J). The large end locates into the recess provided in the front 2 log matrixes 2 off (P). Ensure that all burner ports are clear from impingement; a small rotation counter clockwise can be done to clear ports.

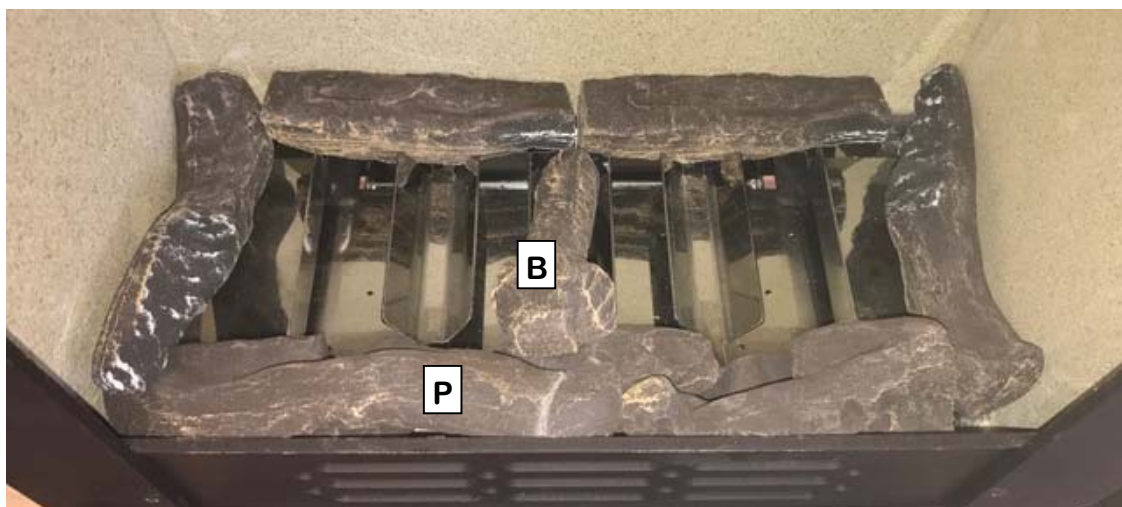


Assembly - Positioning the Logs

STEP 5 - Place log (R) centrally in position on top of logs (J) with the thicker end pointing up on the LHS

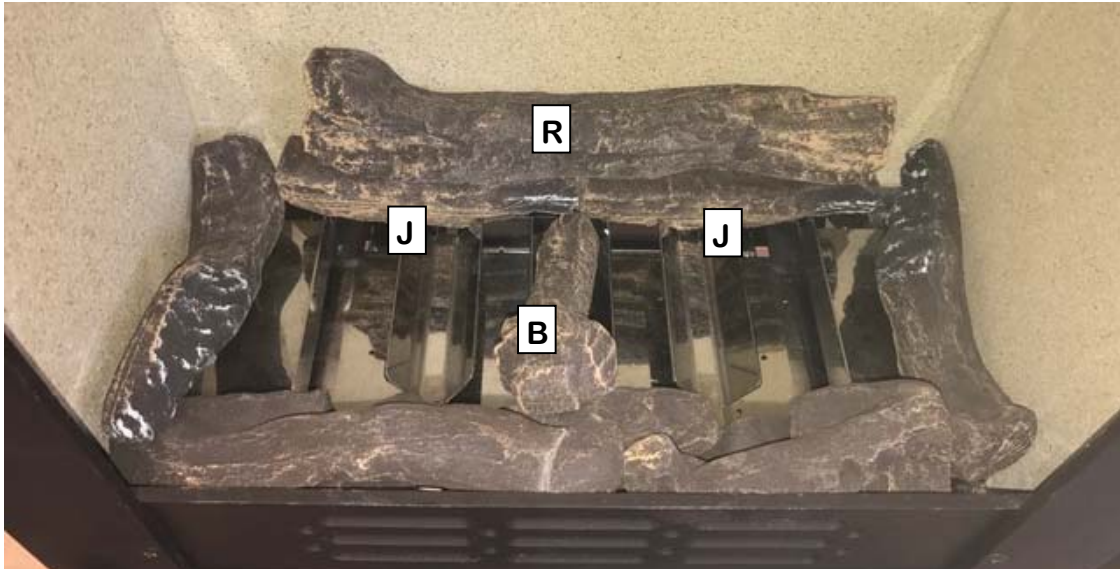


STEP 6 - While holding log (R) in position place log (C) in position, ensuring that the long finger goes into the RHS corner and the short finger lays on top of log (R). The thick end of log (C) should sit in the recess provided in the front matrixes (P).

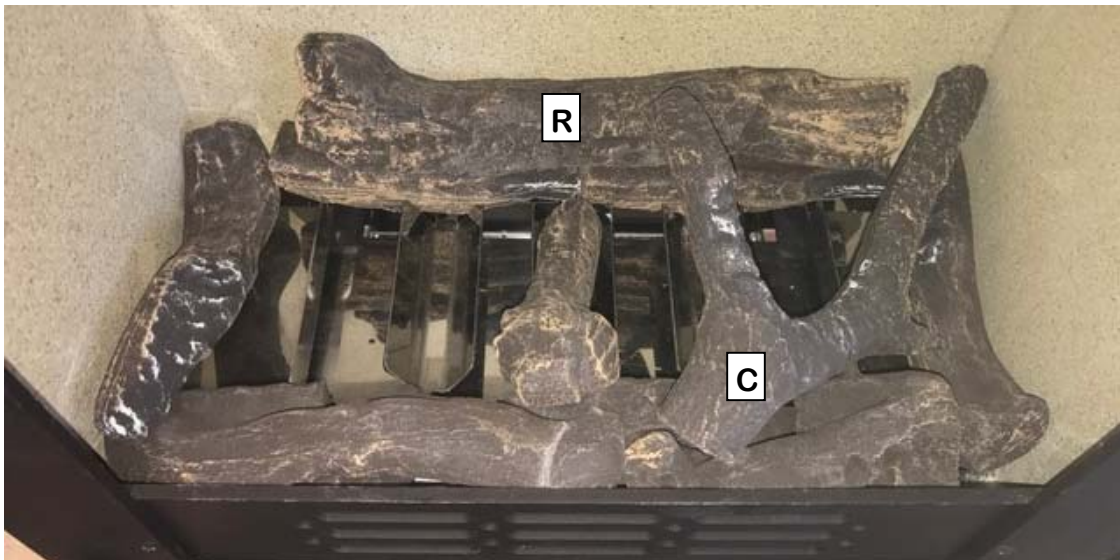

Assembly - Positioning the Logs

STEP 7: Place the 'Y' shaped log, log (A) in position with the single finger resting on log (R) and aligned centrally left to right. The two fingers of log (A) should be positioned centrally above log (B) They will overhang the decorative fret slightly (ensure that this log does not make contact with the glass when the door is shut)

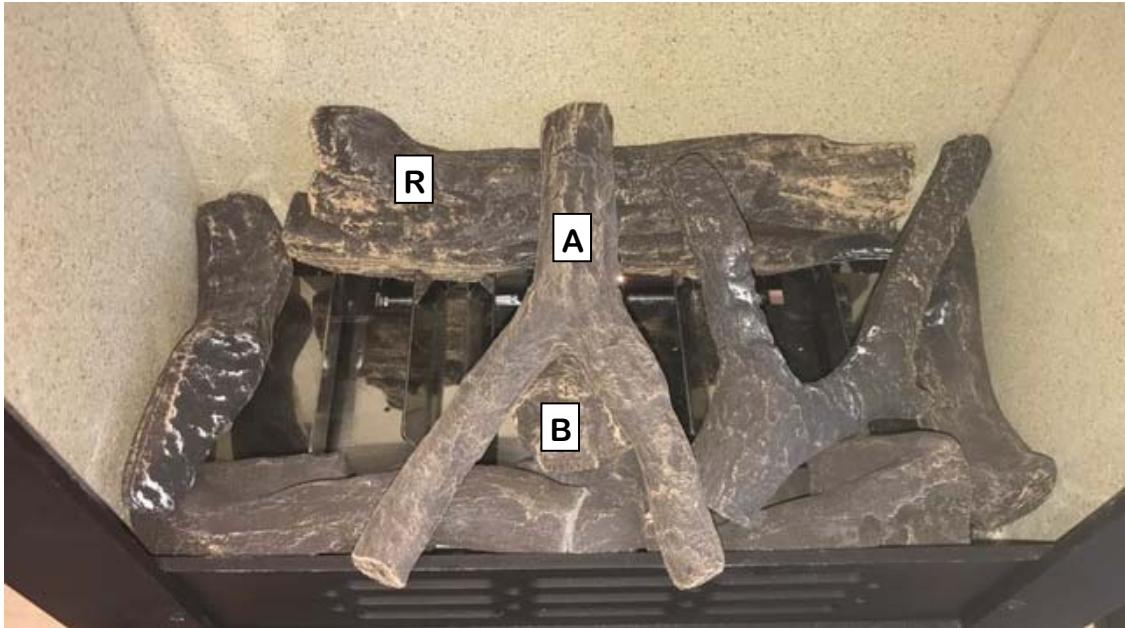

STEP 8 - Place the second log (C) in position with the long finger resting on top of log (R), and the short finger resting down on log (B) aligned above the opening in the metal fuel bed. The single end of the log rests against the door opening and overhangs the fret slightly. (ensure that this log does not make contact with the glass when the door is shut)



Assembly - Positioning the Logs

STEP 9 - Place the third log (B) on top of the LHS Log (B & C) as shown in the photo below. It sits on top of the short finger of log (C).



STEP 10 - Now place the 2x small pine cones (S) as shown below.




Assembly - Positioning the Logs

STEP 11 - Place log (D) in position shown below. Log (D) rests against the rear mica board, and sits on top of logs (R) to the right hand end, and log (A) at the left hand end. The two protrusions are pointing downwards.




STEP 12 - Pine cone (L) is placed so it rests against the right hand mica board, and on top of log (C). Place pine cones (S) and (M) as shown below.

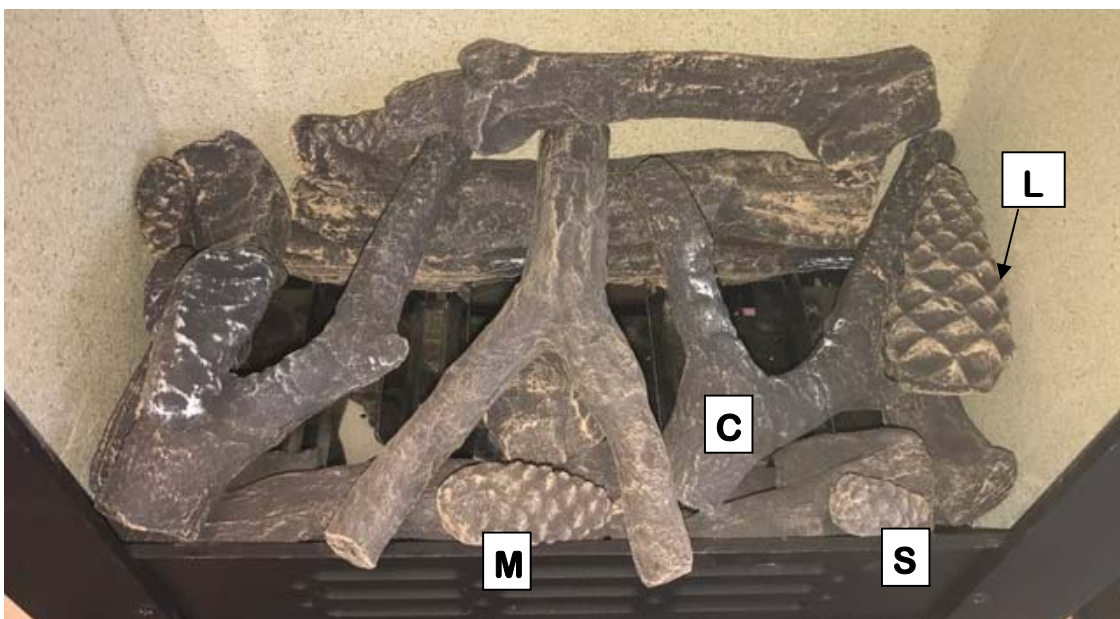


Assembly - Positioning the Logs

STEP 13 - Place log (T) in position so that the thick end is positioned in the front right hand corner, against the side mica panel and the metal body of the stove. The other end of log (T) rests upon the (C) log. The end of log (T) should finish in-line with the single finger of log (A) with a small gap between them.

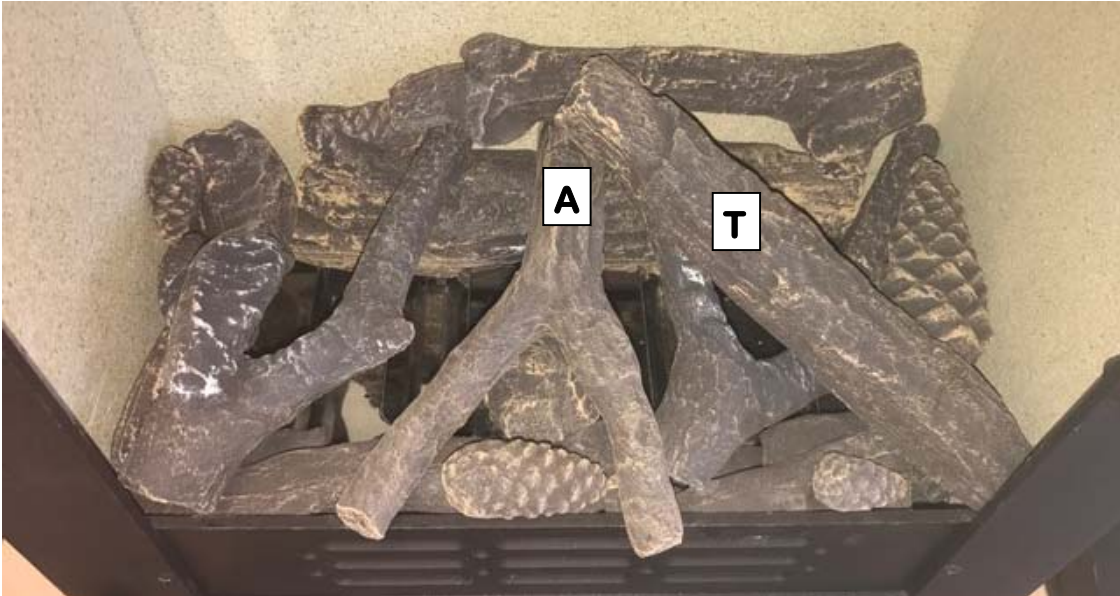


STEP 14 - Place the second log (A) so that the tip of the RHS fork rests on top of log (T) and the tip of the LHS fork rests on top of log (R)

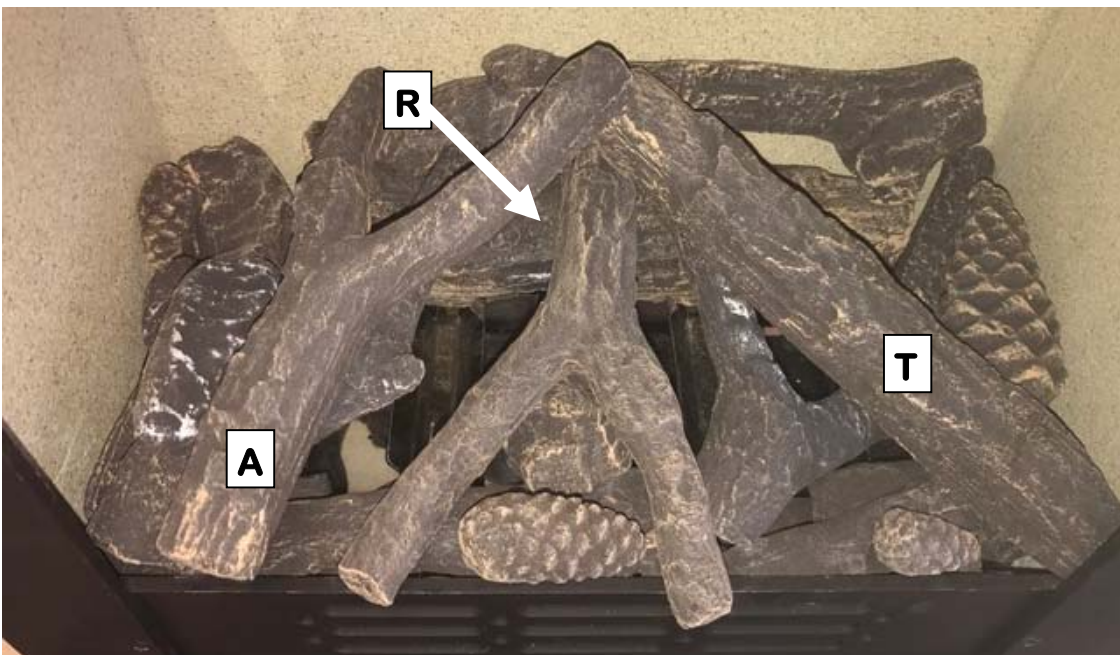

Assembly - Positioning the Logs

STEP 15 - Log (E) sits with the thin end in the front right hand side corner, and the thick end resting on top of log (A)

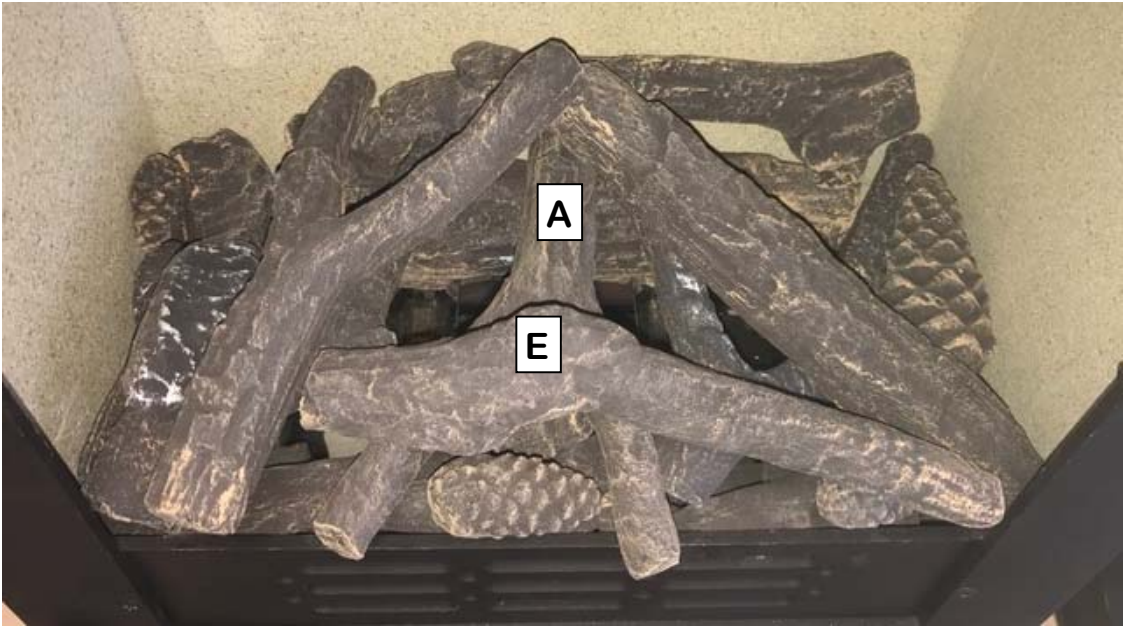

Any soot accumulation within the appliance (including visible soot on logs) indicates that the ceramics need to be re-positioned.

It is important that flames from the burner are not impinged by any of the ceramics, small adjustments may be necessary.

Assembly - Gas Connection & Pressure Testing

A minimum 15mm-diameter gas supply pipe must be used to within 1 metre of the installation with the final connection to the stove to be completed with the suitable 8mm semi-rigid gas pipe. The 8mm pipe should be connected to the inlet of the gas valve using the nut and 8mm olive provided. Support the control whilst finally tightening the supply pipe.

The gas supply connection to the appliance is located at the right hand side rear of the stove. The connection requires an 8mm-diameter semi-rigid pipe, not more than 1 meter in length.

Pressure Testing

Always make sure that there is adequate gas pressure and volume to the stove. The relevant pressures are on the ID plate on the gas control knob.

1. **For natural gas, this is 20mbar** measured at the inlet connection to the stove with the appliance in the full rate position.
2. Ensure that the gas pressure to the stove is maintained when it is operating at the same time as other appliances in the building and that a suitable pressure gauge is used i.e. a manometer. If the gas pressure is not as per above it will be the sole responsibility of the fitter to rectify and Broseley Fires will not be liable for any associated costs.
3. All figures obtained during pressure testing should be recorded on the commissioning form found at the end of these instructions.

Ventilation (GB only)

The gas stove is rated at less than 7kw and therefore does not normally require additional ventilation in the room (BS5871 – part II).

Spillage Testing

A Spillage Test **MUST** be carried out before the installed fire is left with the customer.

Carry out the test by first closing all doors and windows in the room containing the fire. Ensure that the fire is burning at full rate for a minimum of 10-15 minutes.

Using a lighted smoke match, run it along under the rear edge of the stove. The draught diverter box is situated at the rear of the stove, the entry being in the rear panel for the stove. Observe the smoke being drawn into the dilution box. After 10 minutes repeat the test

If there is an extractor fan in a nearby room the spillage test must be repeated with the fan running and all connecting doors between the fire and fan left open.

If there are problems, the chimney / flue may require attention, see “Chimney Requirements” section.

Spillage Monitoring System

This appliance is fitted with an atmospheric sensing spillage monitoring system, in the form of an oxygen depletion-sensing pilot. This is designed to shut down the fire within a safe period if there is an excessive build up of products of combustion within the room space. This would usually only occur if the flue path suffered severe blockage and / or ventilation was severely impeded.

THE FOLLOWING ARE IMPORTANT WARNINGS RELATIVE TO THE SPILLAGE MONITORING SYSTEM

1. The installer must not attempt any adjustments to the spillage monitoring system.
2. There must be no attempt to disable the spillage monitoring system.
3. It is not possible to replace individual parts of the pilot assembly on the appliance – only a complete pilot assembly (including thermocouple) may be fitted in the event of a replacement being necessary. When the spillage monitoring system is replaced, only complete and original manufactures' parts may be fitted.
4. Should the appliance turn itself off, wait for a minimum of 3 minutes before attempting to re-light. In the event of your stove tripping out, consult your installation engineer to have the flue / chimney checked.

Maintenance

Door adjustment

In the case of the door rope not providing an adequate seal to the room, products of combustion may enter the room (see warning notes), to ensure an adequate seal the door may need to be periodically adjusted as the rope seal wears with use.

Hinge Adjustment (seal on Left hand side is not compressed): DESIRE (SD1) AND IGNITE (CD1) MODELS ONLY

- Ensure that the stove is cold before proceeding
- Remove the door by lifting the door off the hinges
- Loosen the Hinge Locking nut inside the stove
- Rotate the hinge by 1 turn (clockwise to tighten seal, anticlockwise to loosen seal) on both the top and bottom hinge, this ensures that the door seal will compress or loosen evenly
- Re fit the door back onto the hinges and tighten the locking nut inside the stove
- Check the seal provides an adequate seal.



Operating the Stove - Manual Control Version

It is important to read these instructions thoroughly before lighting the stove.

The gas stove operates with a traditional permanent pilot light.

The knob for ignition and power control are located on the lower right hand side of the stove, the indicator in the plate shows the knob position (Marked on knob)

The pilot light is located at the front left corner of the front log matrixes.

If the Flame Supervision Device Actuating Flame (the pilot light) is extinguished by intention or not, no attempt should be made to re-light **until 3 minutes have elapsed**.

IGNITING THE PILOT AND USING THE HIGH/LOW FUNCTION

1. From the start position, depress the control knob fully.
2. Whilst depressed, turn knob sharply 90 degrees anti-clockwise to "pilot" setting. You should feel some resistance and hear a click. Repeat until pilot light is visibly lit.
3. **Keep knob depressed at this point for 15-20 seconds, then release.**
4. Upon releasing, ensure the pilot is still lit, if not, repeat above steps.
5. With pilot established, turn the knob Anti-clockwise to select the low flame setting. Turning the control further anti-clockwise you will be able to select the high flame setting.
6. From the high setting you can select low by turning the control knob clockwise.

EXTINGUISHING THE STOVE FULLY


1. From any heat setting, or the permanent pilot, depress control knob and turn clockwise to "OFF" position.

Operating the Stove - Remote Control Version

Quick start user instructions

This control is situated on the lower right hand side of your fire. The drawing below shows the main features of the control.

The control requires 3 AA size alkaline batteries to be inserted under the battery compartment cover. The orientation of these is shown moulded into the battery compartment.

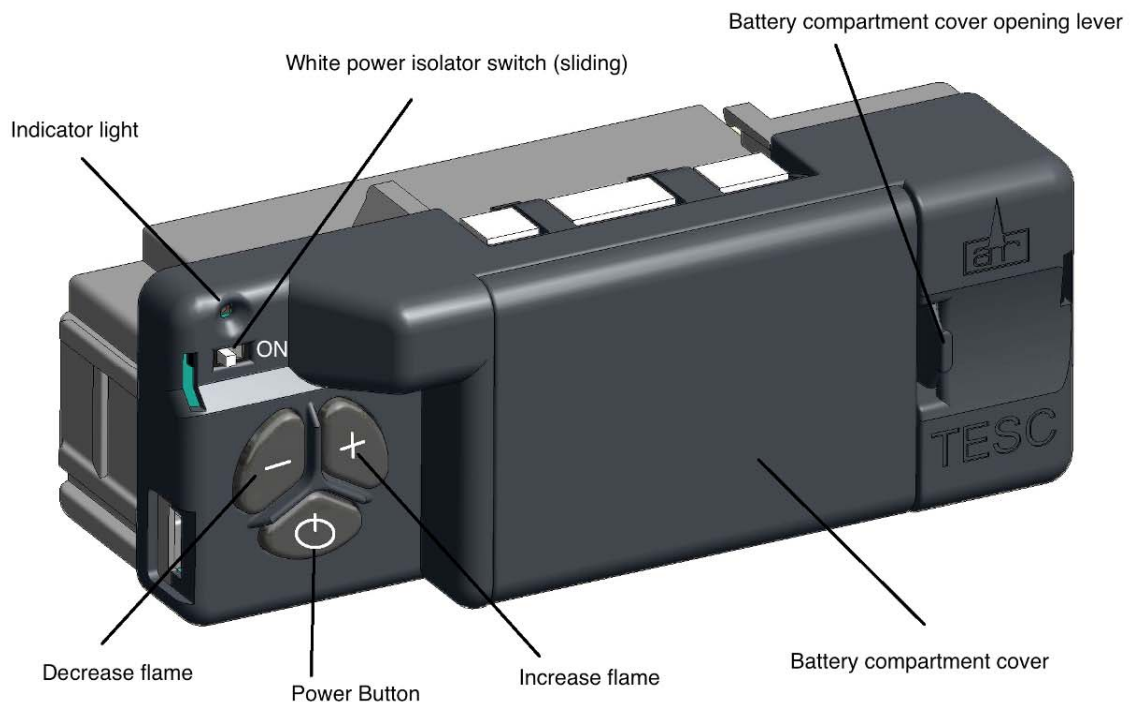

The power of the burner can be adjusted up and down by pressing the – and + buttons. After fitting the batteries and replacing the cover the fire can now operate. Slide the power isolator switch to the right to the on / I position.

To start the fire, press the power button and hold for 1 second then release. The burner will within around 1 to **10** seconds, adjust to the maximum power setting,

To stop the fire, simply press the power button again and the burner will stop.


If you are not intending to use the fire for a long period (i.e. over summer time months) the battery life can be extended even more by sliding the isolator switch to the left (away from the “on” / “I” position, **symbol 0**).

Operating the Stove - Remote Control Version

Handset

Ensure the power isolator switch on the front corner of Fire Control is in the on position I.
 NOTE: For safety reasons a button must be pressed and released for the command to be recognized. Keeping hold of a button when pressing (unless otherwise instructed) will not be recognized as a command press.

Grasp around the handset to unlock its functions. The green unlock light will illuminate to show when the handset is unlocked and ready to accept commands. (N.B. Keep a grip of handset to keep it unlocked, to continue to operate the command buttons)

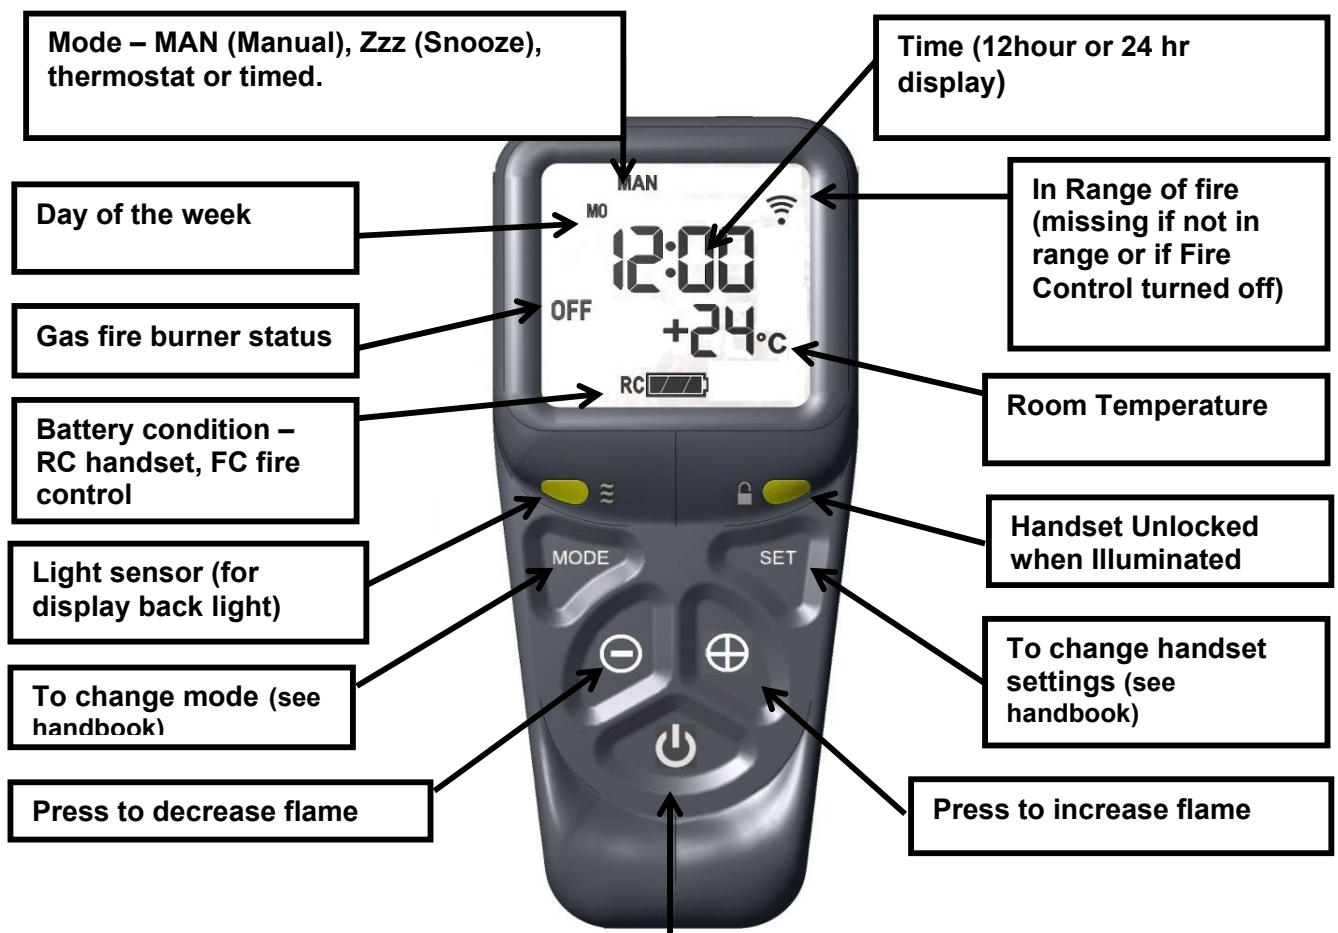


Power button – To start the fire (after following the instructions of the previous page) with one hand grasp around the rear of both sides of the button area control. The green unlock light will illuminate. Keep the handset held to keep the control unlocked, to enable operation of the buttons. Then with the other hand touch and hold a finger on the power button for about 3 seconds. (A short beep and a flash of the unlock light will happen upon touching.) When the word “pilot” appears at the bottom left hand corner of the display, immediately release the power button. (A second flash of the unlock light and a longer beep will also sound at the time to release the power button). The Fire should be lit within a few seconds. (N.B If power button is held for more than a few seconds after second flash/beep/word pilot appears; the command is ignored for safety reasons. Similarly if it is released too soon before the word pilot appears, the command is also ignored. With this system, the control has been designed to ensure that only intended ignition of the fire occurs.) To stop – with handset held to unlock it, press then release power button.

Operating the Stove - Remote Control Version

Operating instruction

The handset comes already paired to work with the fire and the time set etc. Please read these instructions carefully and watch the instructional YouTube video through your internet web browser if necessary. Do not try pairing the handset thinking that it is not paired it is more likely the handset is not being pressed correctly.

For safety reasons the handset is made not to be operated by accident, please follow the instructions as below:-

- The handset should be showing a Wi-Fi symbol  in the top right of the display. This means the handset is within range of the fire Control. (If the symbol is not there check a) the batteries are in the handset and the fire gas control properly the correct way around, b) the batteries are good batteries and c) that the small isolation switch on the gas control in the top left corner is in the “ I “ position and not the “ O “ position).
- To start the fire, with one hand grasp firmly around the rear of both sides of the button area control. The green unlock light will illuminate. (Keep the handset held to keep the control unlocked, i.e. the green light on, at all times to enable operation of the buttons).
- Then with the other hand touch and hold a finger on the power button for about 3 seconds. (Upon touching a short beep and a flash of the unlock light will happen).
- As the handset beeps and flashes the green light for the second time, the word “pilot” will appear at the bottom left of the display, immediately release the power button as the word the word “pilot” appears. (It may take a few practices to do this correctly, but as stated it is done in the interest of safety to prevent unintended operation.)
- The Fire should be lit within a few seconds. (N.B. If power button is held for more than a few seconds after second flash/beep/word pilot appears, the command is ignored for safety reasons. Similarly if it is released too soon before the word pilot appears, the command is also ignored. With this system, the control has been designed to ensure that only intended ignition of the fire occurs.)To stop – with handset held to unlock it first, press then release power button.

Operating the Stove - Remote Control Version

3) Setting the time

Should you have to set the time or change the time you need to enter the SETUP menu. Hold the handset to unlock the keypad and keep held throughout the following steps, (if you release too soon the menu will exit and you will have to start again). Press and hold set for several seconds. The symbol in the top centre will flash. Press and release the "mode" button several times until the word "SETUP" appears flashing in the top right corner of the display.

Press and release "set" again to enter the "SETUP" menu.

Here you can change the clock from 12 hr or 24 hour format, the day of the week, hour of the day, minute of the day and the display in Celsius or Fahrenheit.

To navigate through the menu "set" moves to the next parameter and "Mode" moves back to the previous parameter. "+" and "-" change the display parameter.

Setting the display for 12 or 24 Hour display

The H indicates that it is time to set the timer to either 24 hour display or 12 Hour (AM or PM) display. Press the + or – button on the handset to toggle between the two settings. When you are ready to confirm the setting you want press the "SET" button to progress to setting the day of the week.

Setting the day of the week

Press and release the + and – buttons until the correct day of the week is shown on the display.

(Mo = Monday, Tu= Tuesday, We=Wednesday, Th=Thursday, Fr=Friday, Sa= Saturday and Su=Sunday).

Press "SET" to accept the day of the week and to progress to setting the Hour of the day.

Note: Whilst doing this setup pressing "SET" advances to the next display and pressing "MODE" will return you to the previous display setting.

Setting the Hour

Press and release the + or – button to change the hour to the correct hour and press set to store and to move to setting the minute. Repeat this for setting the minutes.



Operating the Stove - Remote Control Version

Setting the temperature display to Celsius or Fahrenheit

Press and release the + or - button to toggle between C and F. When the display shows the desired symbol, press and releases the "SET" button to store.

As the important settings above have now been done, press and hold for a few seconds the "SET" button for a few seconds and this will exit the setup menu. The control is now ready for use with the Fire Control.



Paging the handset

If you have misplaced the handset you can page it by pressing the + button only on the fire control for around 5 seconds. The handset will flash and make a noise to help you to locate it. Once you pick up the TESC it knows you hold it and so the sound stops. The flashing and sound will last for 60 seconds each time the handset is paged as described. If not found in 60 seconds, page again and so on. NOTE: PRESS "+" Button ONLY, NOT "+" and "-" Together as you will accidentally break the handset pairing and have to reset handset to factory state and pair again (see other parts of the booklet if this happens).

Note: the legend at the bottom shows the battery condition of both the batteries in the hand set and in the fire control alternately. RC = Remote Control handset and FC = Fire control. The control is designed to get the most out of the batteries but when eventually the display shows they are spent (when the battery legend is an empty area, we recommend you change the batteries in the handset before they are flat, to avoid having to re-program the time of day in again. N.B. Pairing is not lost, even if the batteries are removed or flat.

Advanced settings Menu

In the event that you may want to change the other pre-set settings of the control features. Do not do a long press and hold above but a normal short press and release will take you into the advanced settings area.

Advanced settings options are:-

- Back light –
 - A = Automatic (default setting). The back light comes on in the dark but not in the light.
 - 0 = Light never comes on.
 - 1 = Light comes on whenever handset is unlocked.
- Display contrast – 8 levels from 0 to 7 (default level 4).
- P = pairing with other devices other than the fire control. The hand set can pair with other modules to :-
 - L= Operate an electric light – which is the dimmable in 9 steps
 - F= operate an electric fan –which can have 9 speed levels
 - A= operate an auxiliary contact to operate another device.

Operating the Stove - Remote Control Version

Other Modes than Manual mode

Depending upon the model of fire, your handset maybe enabled to have some automatic features, namely, Thermostat mode, timed thermostat mode and snooze mode. Snooze mode can be selected to work with in conjunction with either manual or thermostatic modes.

You can switch between modes at any time with the handset unlocked by pressing and releasing mode button to toggle between modes.

Note: If at any time the power button is pressed during operation, this will stop the fire and exit any automatic mode and return the handset to manual (MAN) operation mode.

Pairing the Handset to the Fire Control and resetting the handset to accept new pairing

NOTE: Do not do this operation just because of difficulties in understanding of operating the handset. The control is supplied originally with the pairing done so should not need doing on initial installation. Check understanding of control operation is understood.

If either the handset is reset or the gas control has the pairing operation buttons operated, the pairing that existed will be broken and both the two operations below will be required to be done to enable a new pairing to be set up.

Firstly Factory Reset of display handset (to enable handset to be paired again)

- To reset a handset to factory conditions and enable it to be paired with a new control, hold the handset to unlock.
- Press and hold the “set” button until handset beeps and release the “set” button. The symbols at the top of the display will be flashing.
- Press and release the mode button as necessary until the word SETUP is flashing in the top right corner.
- Press and release the “set” button again to enter the “setup” menu.
- Press and release the “set” button several times until CAO appears on the display (CA means Cancel All).
- Press and release the “+” button once to change the display to CA1. Press and release the “set” button once more and the display will change to say the word TESC as shown adjacent.
- The handset is now free to pair again.



Operating the Stove - Remote Control Version

Pairing Gas control with handset after handset has been made free to pair as above operation:

- Ensure all the batteries are fitted correctly and with the power isolator slide switch on the TESC Fire control put in the "I" position).
- Place the handset within 1 metre (3 feet) of the fire when pairing
Simultaneously press and hold the – and + buttons on the fire control (i.e. not the handset) until the RED LED light on the gas control starts to illuminate.
Immediately as it does so, press the power button on the gas control and the handset makes a noise and the display shows a symbol like a number 7 back to back with a reverse number 7.
- Then within a minute hold the handset to unlock the keypad a green unlock light will illuminate when the handset has detected your hand. The green light must be illuminated in this way for any of the command buttons to accept commands to operate the fire control.
- While the display is as described and holding the handset as described, press the "SET" button with the other hand to accept the pairing request to finish off the pairing of the handset to the Fire Control and to enter the setup the time of day on the handset as described in previous sections.

N.B If the display returns to the one shown above with the word "TESC" shown, then too much time has passed before pressing "SET" and so the handset has not paired yet. Simply repeat pairing again. **N.B** Only ever press "+" and "-" buttons together when pairing handsets. If done afterwards this will break the pairing made and a factory reset of the handset will need to be performed See Factory Reset of display handset later on in the instructions.

Snooze mode in manual operation

Snooze mode is a time period you can set which will turn off the fire after a certain time period has elapsed.

The snooze time period can be set before or during manual operation of the fire. Hold the handset to unlock as described previously and press the mode button as many times as necessary until the word MAN and the Zzz symbols are flashing at the top of the display. Press and release the set button and this will put the control into Manual snooze mode.

The default time period for the snooze time period is 1:00 hour. Pressing the set button again will show you the snooze time period remaining. This can be adjusted by pressing the "+" or "-" buttons. The timer period that can be set is from 1 minute to 4:00 hours.

After adjusting the time, press set again to enter the time setting required (or if left for a few seconds this time is now stored and used).

Once this countdown timer has reached zero the fire will turn off (as if you had pressed off manually, it does not recycle).

Operating the Stove - Remote Control Version

Snooze mode in Thermostatic mode

The same thing as above can be done before or during a thermostatic mode operation (see below).

Thermostatic mode for closed fires

The handset has within it a thermostat sensor and this can be set so the fire will heat the room to match the temperature set in the handset. There are 3 temperature types that can be set:-

-Day mode temperature that has a sun symbol on the display – the default temperature is 24 C

- Night temperature that has a half moon symbol on the display- the default temperature setting is 18 C

-Frost protection that has a snowflake symbol on the display – the default temperature setting is 5 C

Hold handset and press and release the mode button several times as necessary until the display has a thermometer symbol flashing at the top of the display. Press the set button to enter this mode. Press the set button again to see the temperature setting that is set and the mode (the default is 24 C) and on the left of the display is a sun symbol showing it's the day temperature.

If a different set temperature is required, while the display is showing this set temperature, press the + and – buttons to alter the setting. When finished either press set or leave and after a few seconds the new setting will be accepted and the display will return to the time of day screen.

On the anniversary of the set minute of the clock, the set temperature will be compared to the actual temperature displayed on the handset (i.e. the room ambient temperature around the handset). If the room temperature is higher than the set temperature the fire will not light until the room has cooled to below the set temperature. The fire would then automatically turn itself on when the room is cooler than the set temperature and down and off if necessary when it is hotter than the set temperature.

(Note- when the set temperature is reached while the fire is in operation, the fire reduces the burner power level each minute until the burner is off. The pilot (if fitted) will remain on for a further 30 minutes and if the set temperature is still too high, the pilot will then also extinguish. When the set temperature is higher than the actual temperature, the fire will automatically light and go to the full burner rate to reheat the room back to the set temperature.

Note: If at any time the power button is operated during Thermostat mode, the control will cancel any thermostat operation and return the control to manual mode.

Operating the Stove - Remote Control Version

For ease of setting there are two other modes that can be selected as stated above. Night mode (moon symbol) and frost protection setting (a snow flake). These can be selected (and adjusted if necessary) by pressing set then mode while in thermostat mode. Pressing mode button toggles through from day to frost modes. The purpose of these settings is to help your fire to automatically protect you home against becoming too cold if there is a sudden change in the weather. The control must be left in the appropriate mode for this to function.

Note: As stated in an earlier section, snooze function can also be operated in conjunction with thermostat mode. The thermostat symbol and the Zzz symbol will be on together when in this mode.

Thermostat mode for open fires, this is the same as for closed fires except that:-

The fire will not ignite automatically and it will only regulate between minimum and maximum burner setting. The fire is lit manually by the remote control and then you enter thermostat mode as described above and set the temperature. When no longer requiring thermostat mode. Turn off the burner as described above and the handset returns to manual mode.

Operating the Stove - Remote Control Version

Paging the handset

If you have misplaced the handset you can page it by pressing the + button only on the fire control for around 5 seconds. The handset will flash and make a noise to help you to locate it. Once you pick up the TESC it knows you hold it and so the sound stops. The flashing and sound will last for 60 seconds each time the handset is paged as described. If not found in 60 seconds, page again and so on. NOTE: PRESS “+” Button ONLY, NOT “+” and “-” Together as you will accidentally break the handset pairing and have to reset handset to factory state and pair again (see other parts of the booklet if this happens).

Installer note:

To reset the handset to factory conditions (to enable the handset to be paired with another fire for example), hold handset to unlock, press and hold for at least 10 second the SET button. The green and red lights will start to flash. They will flash for 1 minute and during this minute if you want to reset the handset, open the battery box and remove a battery for a few seconds. Replace the battery and cover, the handset will now be reset and ready to pair as a new handset to another (or the same) device as shown above in pairing section.

Pairing a new handset

Remove the back panel and insert two AA Alkaline batteries in the direction shown by the symbols moulded into the compartment and replace the cover. Hold the handset with one hand ensuring your hand is wrapped around the back and that your hand is in contact with both sides of the handset. The green light of the “Unlock” symbol should light and flash. The flashing indicates that it is not paired with anything at the moment and is ready to be paired. Put the handset down within 1 metre of the Fire that you wish to pair the handset with. Press the + and – buttons on the Fire Control (i.e. not the + and – buttons on this handset) for around 6 seconds. The red light on the gas control will flash and then within 2 seconds press the power button on the fire control the handset should make a noise and the green “Unlock” light should be flashing even without holding the handset. The handset has received a pairing request and to accept this pick up the handset and hold as described above to keep the keypad unlocked and press and hold the “SET” button for 3 seconds. You will hear a beep and now the handset is paired to the fire control. The unlock green light will stay permanently lit when holding the handset Note: If the power button differently to the above i.e. pressed for too long or too short a time or the grip on the handset is not firm or released too soon, the Ignition will be interrupted and not complete. The reason for the remote control having this strict start sequence is for safety reason so that the starting operation of the fire will be most unlikely to be done other than intentionally by an adult. If not done correctly, wait a few seconds and try again.

PLEASE EXPLAIN TO THE CUSTOMER THESE LIGHTING AND EXTINGUISHING PROCEDURES

Cleaning the Stove / Curing the Paint

Important Note:

Should the glass door become broken or damaged in any way, turn your stove off and do not attempt to re-light it. Contact your dealer for a replacement to be fitted before relighting the appliance. The glass used in this appliance is a ceramic type glass suitable for operation up to 750 degrees do not use any other types of glass in this appliance.

Cleaning

We recommend only doing this when the stove is cold using a soft brush to clean any of the stove surfaces, this is normally sufficient to remove dust and general debris. For stubborn marks you can use a damp lint free cloth, ensure that all surfaces are dried off immediately. We do not recommend using any kind of chemicals or abrasive materials. It is possible to touch up the paint using the original black stove paint, however this new paint will then need to cure.

Curing the paint

It is important to note that upon initial lighting of the stove you will notice a strong odour, this is the paint curing and is completely normal.

Most high temperature paints operate in the same way. They use a resin which dries at room temperature and a silicon resin which cures at high temperatures. When the stove is burned the dry resin burns away and the silicon cures. This transition occurs about 240 degrees C / 475 degrees F.


Light the appliance and set the control to the "HIGH" position for the maximum output. The surfaces of the stove will take an hour to reach maximum paint curing temperature. The longer you can leave the stove at this temperature the faster the paint will cure (this could involve several prolonged periods)

IT IS NORMAL FOR THE STOVE TO GIVE OFF ODOURS WHILST THE PAINT, SEALANT AND METAL COMPONENTS.


Trouble-shooting

The gas pilot will not ignite or stay lit

- Ensure the gas is turned on at the appliance and the meter / cylinder.
- Is there a strong spark being generated, check connections if not.
- The pilot gas button must be held in for at least 20 seconds once the pilot is established to ensure the safety thermocouple is heated sufficiently.
- Ensure that both ends of the TTB connection cable are firmly connected. Instruction for connecting the TTB is given earlier in this instruction (page 9). You can also rule out a faulty TTB sensor by connecting the two ends of the TTB connection wire together using a metal paper clip.
- Make sure that the brass interrupter (connects thermos-couple and TTB to valve – shown on page 9) is not too loose. You should not be able to move the interrupter by hand. Any break in the following circuit will cause the pilot not to stay alight as the electrical charge from the thermos-couple needs to arrive at the valve to keep it lit:

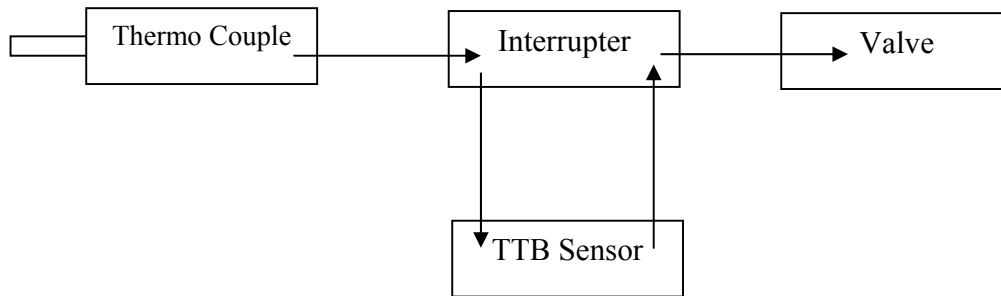

 - Take care not to overtighten the interrupter unit into the valve as this can twist the spade connections. As you look at the back of the interrupter the spade connections should look like two vertical lines (if they are more like 45° then its too tight)




- Ensure that the pilot injector is not obstructed or blocked and it is free from any dust or dirt.
- Ensure gas pressures and flow rates are correct, as this will prevent ignition of the pilot. An indication of high pressure can be a whistling sound from the pilot.
- Ensure that the pilot assembly has not been damaged in transit. Be sure to check the gap between the thermocouple and electrode is sufficient and that the spark is not arcing elsewhere, this is a very delicate device.
- The pilot flame should burn with a strong blue flame. The flame should be focused on the tip of the thermocouple.

Trouble-shooting

The main burner does not seem to burn correctly or will not stay alight

- Ensure gas pressures and flow rates are correct.
- Test with all ceramics removed
- Confirm that the flame pattern is even across the surface of the burner by removing all of the ceramics. Only do this once pressures and flow rates are confirmed as being correct.
- Double check all ceramics are re-positioned correctly.
- Ensure you have the required 1 - 3mm gap from the head of the pilot to the base plate (base plate may have moved in transit)

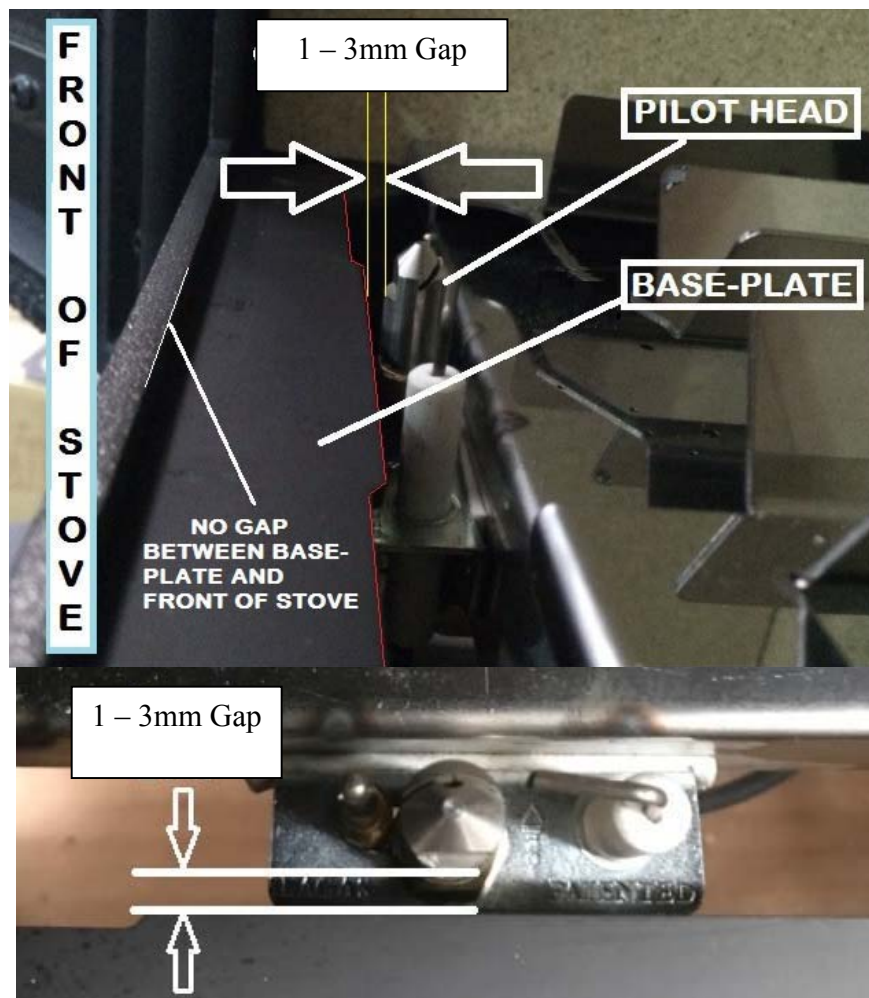

Once all the above checks are completed, leave the appliance in a fully commissioned state.

Servicing Instructions

Servicing should be carried out annually by a qualified installation gas safe engineer.

- To open the door, remove the handle by rotating it anti-clockwise until it clears the thread. The handle acts like a nut on a thread and once removed will allow the door to open fully.
- Remove the logs and clean any dust and debris from the top of the burner unit and the inside of the stove. A vacuum cleaner can be used, but take care around the pilot assembly to prevent accidental damage. A clean soft brush can also be used. Take care not to brush any debris towards the pilot as this may cause an obstruction in the jet.
- Clean any dust/debris from each individual ceramic using a very soft brush.
- Check the condition of the ceramics. Damaged ceramics will affect the efficient operation of the stove and will need to be replaced.
- Clean the glass with a soft cloth.
- The outside of the stove can be cleaned as per instructions given previously.
- Re-lay the ceramics and close the door ensuring an air tight seal.
- Ignite the appliance and observe an even flame pattern.

Carry out all necessary final checks and leave the appliance in a fully commissioned state.

Commissioning Form

THIS SECTION MUST BE COMPLETED AND SIGNED BY THE INSTALLATION ENGINEER

PLEASE LEAVE WITH THE CUSTOMER AND THE APPLIANCE.

Size of Governor setting: (i.e.) Natural Gas 20mbar.

Length and size of gas supply: _____

Meter pressure Fire only on: _____

Meter pressure with all other appliances on: _____

Burner pressure Fire only on: _____

Burner pressure with all other appliances on: _____

Gas rate - Natural Gas - Time for 1 cubic foot in seconds: _____

Top or Rear Flue Installation: _____ Overall length of flue: _____

Is there any spillage: _____ Is the draught excessive: _____

Is there any permanent ventilation in the room: _____

Is the TTB connected correctly (both ends): _____

Is the aeration of the pilot correct: _____

Does the flame encircle the Thermocouple: _____

Installation Engineers Name:

Installers _____

Address _____

Post Code: _____

Telephone: _____

Fax: _____ Mobile: _____ Other: _____

Gas Safe Registration No:

Signed: _____ Date: _____

Guarantee

Your decorative gas fire, when installed in accordance with the installation instructions and operated in accordance with these instructions should provide many years of safe and efficient operation.

Should you wish to claim under the warranty, please contact the supplier / dealer from whom you purchased the appliance. Do not claim directly to Broseley Fires, or Be Modern, as they are unable to process any direct claim from an end user.

We thank you for purchasing our product and trust it will provide excellent service.

This appliance carries a guarantee of One (1) Year.

We agree to repair free of charge or, at our option, replace the appliance or part thereof, which may prove to be defective within the guarantee period.

The guarantee is void if:


- The appliance is not installed and operated in accordance with our instructions, or
- Repairs or modifications have been carried out by the purchaser or any third party not authorised by us or:
- The appliance has been misused or accidentally damaged, or
- Damage is due to 'fair wear and tear.' or
- The appliance or defective component(s) are not returned to us, prepaid postage.
- The appliance has not been serviced annually by a 'Gas Safe Registered' engineer.

The rights given in this guarantee are limited to the UK mainland and are in addition to any to which you may have a statutory entitlement.




Please retain your purchase receipt. We will need to see this in the event of a claim under warranty.

<p>Broseley Fires Ltd, First Floor, Unit B Knights Court, Archers Way, Battlefield Enterprise Park, Shrewsbury, Shropshire SY1 3GA Tel: 01743 461444 Fax: 01743 461446 http://www.broseleyfires.com</p>	<p>Bemodern Ltd. 19/34 Bedesway Bede Industrial Estate Jarrow Tyne and Wear NE32 3BE Tel: 0191 4898266 Fax: 0191 4834148 http://www.bemodern.co.uk</p>
--	--

Top Flue Outlet

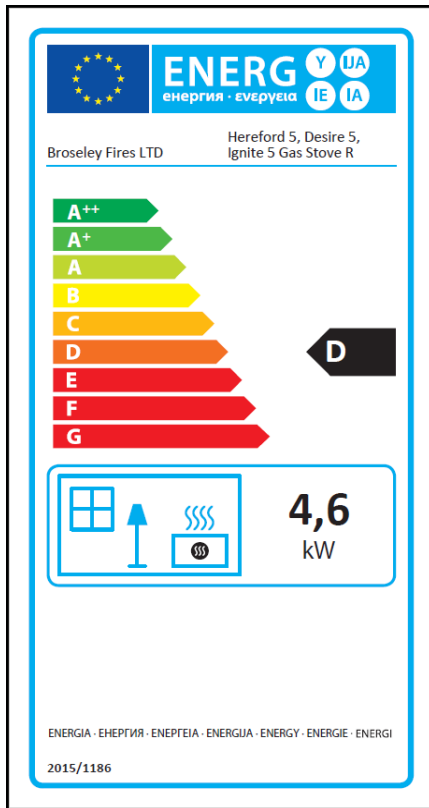

Rear Flue Outlet

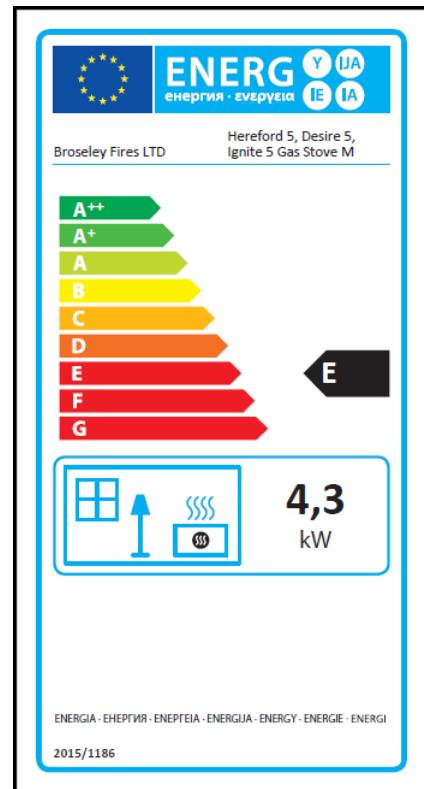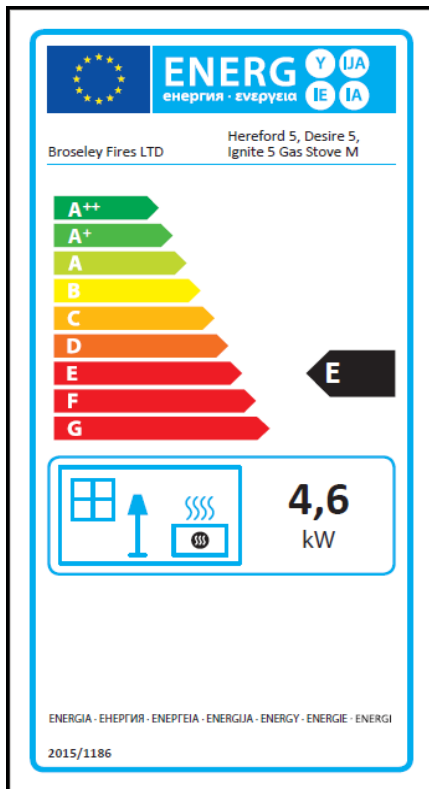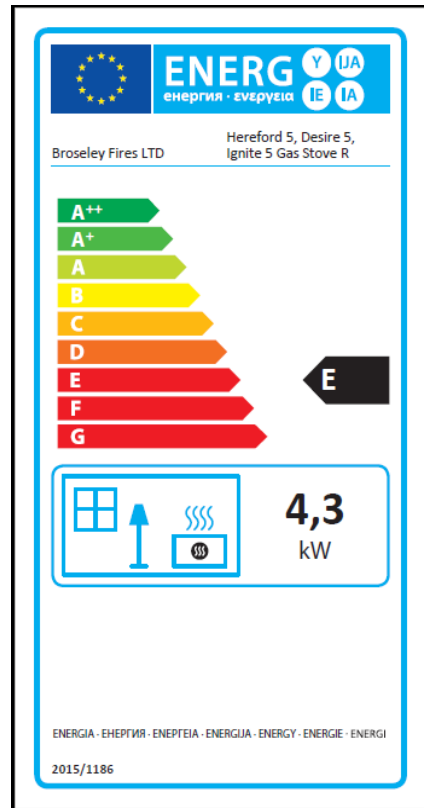

Product Fiche				
Manufacturer : Broseley Fires Ltd				
Model No.	Hereford 5, Desire 5, Ignite 5 Remote Top Flue	Hereford 5, Desire 5, Ignite 5 Remote Rear Flue	Hereford 5, Desire 5, Ignite 5 Slide Top Flue	Hereford 5, Desire 5, Ignite 5 Slide Rear Flue
Fuel Type	Natural Gas I2H	Natural Gas I2H	Natural Gas I2H	Natural Gas I2H
Energy Efficiency Class	D	E	E	E
Indirect Heating Functionality	No	No	No	No
Direct Heat Output kW	4.6kW	4.3kW	4.6kW	4.3kW
Indirect Heat Output kW	N/A	N/A	N/A	N/A
EEl	76%	71%	71%	66%
Useful Energy Efficiency (NCV)	High : 80%	High : 75%	High : 80%	High : 75%
Useful Energy Efficiency (NCV)	Low : N / A	Low : N / A	Low : N / A	Low : N / A
Nominal Heat Output	High : 4.6kW	High : 4.3kW	High : 4.6kW	High : 4.3kW
Nominal Heat Output	Low : 2.7kW	Low : 2.5kW	Low : 2.7kW	Low : 2.5kW
Heat Output Temperature Control	Electronic Room Temperature Control Plus day Timer	Electronic Room Temperature Control Plus day Timer	Two Manual Stages	Two Manual Stages
Permanent Pilot Power (kW)	N/A	N/A	N/A	N/A
Space Heating Emissions NOx (GCV)	130mg/kWh	130mg/kWh	130mg/kWh	130mg/kWh

Important Note:

The energy efficiency class of this product is defined using a seasonal efficiency calculation which reduces the actual net efficiency of the product where the use of automated heat control, thermostats, window open sensors and timers are not used. This is not to be confused with the net efficiency, or useful efficiency of the appliance (shown in the tables above).

This product MUST be installed by a Gas Safe Registered Installer. Full details are provided in this manual.

Broseley Fires Ltd, First Floor, Unit B Knights Court, Archers Way, Battlefield Enterprise Park, Shrewsbury, Shropshire SY1 3GA